

# Quick Start Guide OMI - OMNEO Matrix Interface



#### Included:

- · Safety Instructions ST-CO
- · OMNEO Software Suite CD
- · OMI Quick Start Guide
- OMI Documentation Resource Disk
- 2 Screw Panhead, M2.5 x 10.0
- Back Card Assy., OMI
- Front Card, 64 CH, OMI

Front Card, 48 CH, OMI

or

Front Card, 32 CH, OMI

or

Front Card, 16 CH, OMI

### Requirements:

You must have the following:

- Screwdriver
- MCII-e version 2.9

#### ADAM-M Frame Installation

**Important**: Up to four (4) OMI card sets can be used in an ADAM M frame at a time.

To install the OMI card into the ADAM-M frame, do the following:

- Using the Installation CD, follow the instructions in the readme.txt file to install all the required software needed for OMNEO functionality.
- Gently insert the **OMI front card** into the appropriate ADAM M slot.




**NOTE**: Take care to insert the card properly, as shown.

Using the card ejectors tighten down the front card by pushing it into the slot.  On the back of the ADAM-M frame, carefully insert the **OMI back card**, taking care to align it with the OMI front card, as shown above.



5. Ensure the **OMI back card** is seated properly against the OMI front card and is sitting firmly in the frame.

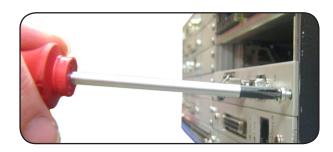

Using the supplied screws, tighten the **OMI back** card to the frame.



Ensure the card ejectors are tightened to the chassis on the OMI front card.

F01U273977 Rev 02 03/2013



# Quick Start Guide OMI - OMNEO Matrix Interface

#### ADAM Frame Installation

**Important**: Up to eight (8) OMI card sets can be used in an ADAM frame at a time.

To **install the OMI card into the ADAM frame**, do the following:

 Gently insert the **OMI front card** into the appropriate ADAM slot.



- 2. Using the card ejectors, tighten down the **front** card.
- On the back of the ADAM frame, carefully insert the **OMI back card**, aligning it with the OMI front card.



- 4. Ensure the **OMI back card** is seated properly against the OMI front card and is sitting firmly in the frame.
- 5. Using the supplied screws, tighten the **OMI back card** to the frame.



6. Ensure the **card ejectors** are tightened to the chassis on the OMI front card.





## Quick Start Guide OMI - OMNEO Matrix Interface

### Cabling DB-9 Connector Pinouts RS-232 Mode

N/A
2-TXD Output
32-RXD Input
N/A
Ground
N/A
RS485+
RS485-
N/A
Ground
N/A
N/A
N/A
N/A
tional pair A+
ctional pair A-
tional pair B+
tional pair C+
ctional pair C-
ctional pair B-
tional pair D+
ctional pair D-

### Configuration

Consult the OMI Technical Manual (P/N F.01U.261.047) for specific instructions to complete the following steps.

To configure the OMI card in AZedit, do the following:

- Step 1: Download the License File for more channels, if applicable.
- Step 2: Assign ports to the card using the Port Allocation table.
- Step 3: Set up the network configuration.
- Step 4: Configure Keypanels to the OMI cards.

To **configure the OMI card in IPedit**, do the following:

- Step 1: Using AZedit, download the License File for more channels, if applicable.
- Step 2: Add the OMI to IPedit, using Add Device.
- Step 3: Set up the network configuration.
- Step 4: Configure keypanels to the OMI cards.

#### System Drawing

Single subnet system with less than 128 OMNEO nodes:

